
INSTRUCTIONS TO BATTERY ROOM 1 / KITCHEN


A few tips for removing supports from parts:

- Use side cutters or a SHARP knife
- When cutting the support, also support it with your finger on the other side
- First remove the parts from each other and then from the supports
- There is two sizes of supports. Remove the thick ones first. The smaller ones may even detach themselves after that. See picture 1
- In the thinnest pipes, I recommended to start removing the supports in the middle and proceed to the ends. But before that the thick ones. See picture 2.
- The set includes a few spare parts

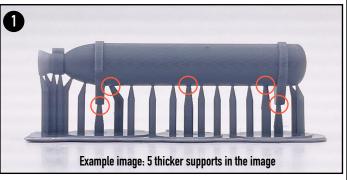




- The original floor must be narrowed.
- You dont need orginal part Q3.

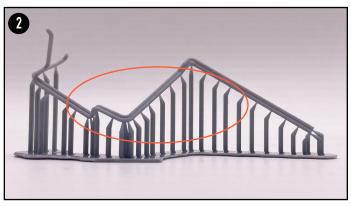


If some parts look different in the instructions than the kit. You just received the updated part. The better one

BATTERY ROOM 1

FRAME & SHEET 1

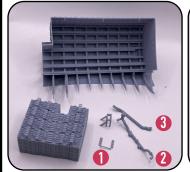



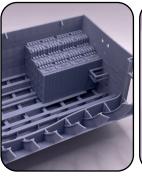



SHEET 1 PARTS

BATTERY SET 1

Good to remember right from the start. All batteries in the series are different. So be careful when installing them.


This is the installation order of the first set of batteries from the back wall to the front. First install only the first three sets of batteries first. Then install the support iron (See the next picture) and continue installing the batteries

LAST 3 PARTS

Installation order:

- 1: Battery cable
- 2: Ventilation pipe
- 3: Pilge Pipe

SHEET 2

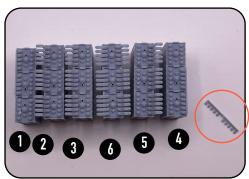





BATTERY SET 2

Install the batteries in the same way as before and finally the battery cable

SHEET 3

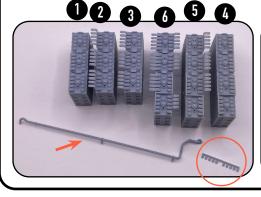

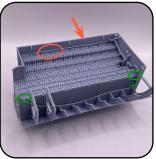


BATTERY SET 3


Again.


- 1: Batteries first in the correct order.
- 2: Battery cable
- 3: Dirty water pipe (schmutzwasser)

The green marks show where the battery wires go up to the electrical center, which is located next to the toilet

SHEET 4

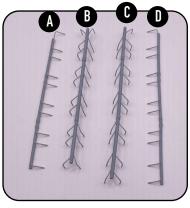

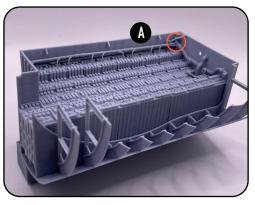

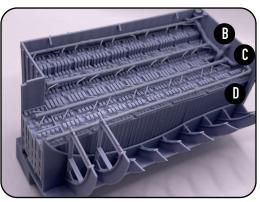



AIR VENTILATION PIPES

- 1: First, glue each air conditioning pipe together
- 2: Install the pipes in battery order starting from the back wall

Tip: You don't necessarily need glue to connect except than thick pipes. Red circle.

SHEET 5

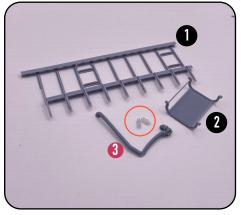

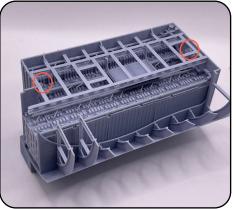



UPPER FRAME


- 1: Insert the battery sled (2) on the rails of the upper frame (1). No glue is needed if you want the battery sled to slide. See Figure 2
- Battery Room is now ready!

FINAL RESULT


- 2: Glue both lamps in place
- 3: Glue Upper frame and finally the bilge pipe (3) to the the fuel tank side

KITCHEN

KITCHEN SHEET 1 AND 2

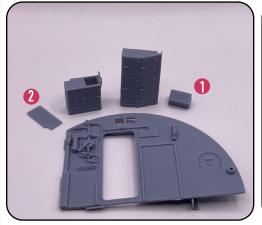



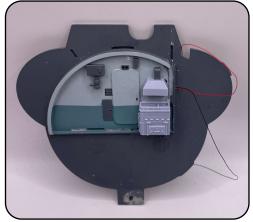


KITCHEN WALL

the installation order does not matter. However, it is probably a good idea to put the water tank (1) first. Part number 2 is the wooden cover of the kitchen sink. Use it if you want.


KITCHEN BULKHEAD

Oven and cooker hood installed. Be careful that you can install the Trumpeter wall and floor in place.



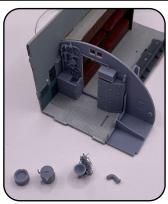



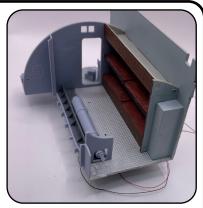

FLOOR

- 1: Cut Trumpetter's original floor to a new size. The correct width is 52 mm. Cover the wall mounting hole from the floor.
- 2: Install the kitchen knives


FLOOR

- 1: glue the kitchen wall and the toilet floor
- 2: Assemble the electric boiler and glue the toilet pipe to the toilet bowl. Glue both on the model in the order you want
- 4: Now it's good time to install all the other kitchen accessories you want

SOLDIERS COMPARTMENT

Glue the wall and air pressure bottle. If you want to install a Trumpeter cabinet, move the air pressure bottle more inside



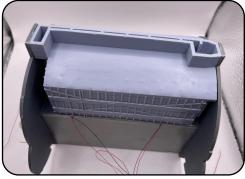

RUDDER ARMS

- 1: Now glue the bulkheads. I recommend that you install the roof very last, unlike the Trumpeter's instructions. Just cut before four bulkhead brackets from the roof.
- 2: Next install the rudder shafts. If you have a Diesel room and a navigation room, be sure that the rudder shafts are the same lines than they are in the other rooms
- 3: Don't forget to build the crew compartment also with the parts of the trumpeter.
- 4: The series also includes lamps that you can place on the floor as you like. They fit a 2mm hole and you can fit a 0402 micro Led inside

AKKU ROOM

Glue the battery room between the bulkheads and this set is complete